


DSC User Guide

TO ARM ENTIRE SYSTEM – BOTH INTERIOR AND PERIMETER

- Close all windows and doors (the green READY light will turn ON)
- Press and hold  (Away) for 2 seconds (the keypad will beep rapidly 5 times and the red Armed light will turn ON)
- Exit premises before the delay time expires

TO DISARM SYSTEM WHEN YOU RETURN

- When you enter through the door, the keypad will emit a steady warning tone
- Enter your 4-digit Master Code or User Code (the armed light will turn OFF)
- If you make an error, press # and enter the 4-digit code again

TO ARM PERIMETER OF BUILDING AND STILL MOVE FREELY INSIDE

- Press and hold  (Stay) for 2 seconds

TO ARM SYSTEM WITH DOOR OR WINDOW OPEN

- Press * 1 while disarmed
- The Bypass light will flash
- Enter the 2-digit zone number to be bypassed
- To exit the Bypass function, press #

TO SILENCE ALARM

- Enter your 4-digit Master Code or User Code

WHEN THE TROUBLE LIGHT COMES ON

- Press * 2
- Some keypads will describe the Trouble (full-message keypads); others will only identify the Trouble number (fixed-message and LED keypads)
- If Trouble number 8 is lit, the time and date needs to be reset (see page two)
- For all other trouble conditions, please contact Pointe Alarm at (313) 882-SAFE

DSC User Guide



TO SET DATE AND TIME

- Press * 6 and enter the 4-digit Master Code
- 1 long beep indicates an error, press # and enter the Master Code again
- After 4 short beeps, press 1, then 10 digits; 2 each for the hour, minute, month, day, and year (HH:MM MM/DD/YY)
 - Use a 24-hour clock (e.g. 8:30pm = 20:30)
 - Use 2 digits each to indicate the month and day (e.g. March 8 = 03 08)
 - Only enter the last 2 digits of any given year (e.g. 2007 = 07)


 

TO ENABLE DOOR CHIME FEATURE

- Press and hold  (Door Chime) for 2 seconds
- 3 beeps = ON; 1 long beep = OFF

CHANGING KEYPAD BUZZER TONE

- If using a PK5500 keypad, press * 6 and enter the 4-digit master Code, then proceed with the following:
 - Scroll to the phrase “Buzzer Control” and press *
- If using an LED or fixed-message keypad, press * 6 and enter the 4-digit Master Code then proceed with the following:
 - Press and hold  (Left Arrow)
 - The tone will change
 - When the desired tone is identified, release  (left arrow)

TO SOUND AN ALARM MANUALLY

- Press and hold  (Fire),  (Emergency), or  (Panic) for 2 seconds

For any additional questions, please do not hesitate to contact
Pointe **Alarm** at (313) 882-SAFE